

General Specifications

GS 36J04A10-01E

NTPP001, NTPP002, NTPP003,
NTPP004, NTPP005, NTPP006,
NTPP007, NTPP008, NTPP009

Exaquantum

Exaquantum Plant Information Management System

■ GENERAL

Exaquantum is a Plant Information Management System (PIMS) product that provides business benefits to users in the Hydrocarbons, Chemicals, Power & Utilities, Pulp & Paper and many other industries. The main function of Exaquantum is the acquisition of data from all facets of a business and the subsequent transformation of that data into easily usable, high-value, widely-distributed information. The data then becomes an integral part of the set of tools used by the business in vital decision-making processes.

Exaquantum supports rapid plant-related deployment, making the software easy to implement within plant-specific operational environments. This allows information to be structured sensibly around the production calendars and shift patterns in the plant.

Exaquantum is the business intelligent gateway between the operational Process Control System (PCS) and the business Enterprise Resource Planning (ERP) system. Using the latest, proven, Microsoft based open technology Exaquantum is designed to provide low administration costs, and be robust to future IT trends.

Exaquantum comprises the following features:

- Process Control Systems Interface
- Data processing and storage
- Role Based View of Exaquantum resources
- Visualization – Exaquantum/Explorer and Web UI
- Multiple server support
- Data exposure via APIs / OLE DB / OPC Classic / OPC UA.

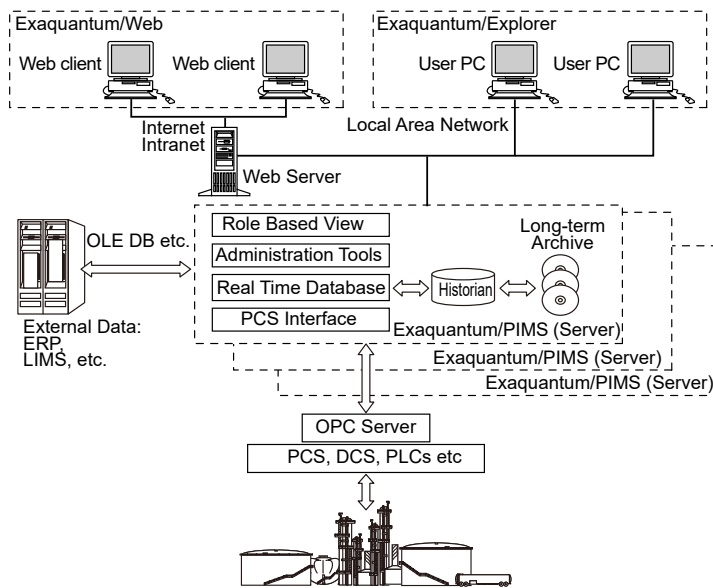


Figure Exaquantum Overview

F01E.ai

■ KEY FEATURES

● Process Control Systems Interface

Exaquantum primarily uses embedded OPC clients to access PCS data with the following OPC servers.

Data Access – OPC DA 2.05a compliant

- Yokogawa Exaopc for CENTUM, STARDOM and DARWIN.
- Yokogawa Exaopc-RD Redundancy package (*1)
- Yokogawa FAST/TOOLS SCADA

Data Access – OPC UA DA compliant

- SMARTDAC+ (*2)
- OPC UA Server (*3)
- Exaquantum (*4)

Alarms and Events Access – OPC A&E 1.1 compliant

- Yokogawa Exaopc for CENTUM
- Yokogawa Exaopc-RD Redundancy package. (*1)
- OPC A&E Servers from other suppliers.

Alarms and Conditions Access - OPC UA A&C 1.05 compliant

- OPC A&C Server from other suppliers.

Historical Data Access – OPC HDA 1.1 compliant, OPC UA HDA compliant

- Yokogawa Exaopc for CENTUM
- Yokogawa Exaopc-RD Redundancy package. (*1)
- OPC HDA Servers from other suppliers.

Text Files

Import and export data in Exaquantum-defined ASCII format.

- *1: When connecting Exaquantum to Exaopc-RD, please contact your Yokogawa representative.
- *2: R3.10 or R3.15, SMARTDAC+ can only be available.
- *3: R3.20 or later supported OPC UA server information, please contact your Yokogawa representative.
- *4: R3.50 or later, Exaquantum as a client for data collection.

● Data Processing and Storage

The Exaquantum Real Time Data Base (RTDB) provides tag-based, real-time process data to be utilized in various business application software. The data acquired to the RTDB can be optimized through the following functions:

- **Quality Codes**

Users can judge the validity and reliability of data at a glance. Exaquantum assigns quality codes to data that is transparent to data users. Quality Codes do not count as licensed tags.

- **Aggregations**

Basic statistical functions (minimum, maximum, mean, standard deviation, summations, differential summation and spot value) are calculated and stored using tag values over pre-defined (hour, day, month or user-defined) time periods. Aggregations do not count as licensed tags.

- **Custom Aggregations**

Users can query for aggregations over custom periods using the Exaquantum Excel Add-In or API.

- **Function Block**

Users can configure relational complex data processing groups as function blocks allowing easy and repeated use of data.

- **KPI Calculations**

Users can script simple or complex logic to create raw or aggregated values using calculated tags.

- **Exaopc HDA**

Following an Exaquantum shutdown period, Exaquantum can access Exaopc's (R2.10 or later) HDA server to retrieve missing process data (allowing aggregated and calculated values to also be generated) and Alarms & Events (A&E). After a LAN interruption, aggregation values can be recalculated. Exaquantum can access Exaopc's (R3.10 or later) HDA server to retrieve missing process data.

To enable Exaopc History Catch-up functionality, it is necessary to install Exaopc on a separate server to that used by Exaquantum. The specification of the Exaopc server must be suitable for History Catch-up to perform properly.

Exaquantum can also be used as a Data Historian to securely store large amounts of process data and Alarms & Events. Its powerful and fast storage and retrieval capabilities means there is virtually no limit to the amount of historical data that can be available online. Automatic archiving and deletion permits older data to be removed from the system, which can be restored later.

● Role Based Name Space (RBNS)

Exaquantum can be configured to provide each user with their own Microsoft Windows group-personalized folder hierarchy and naming convention view of Exaquantum process data when using the Exaquantum Data Selector within Exaquantum/Explorer, Exaquantum/Web or the Exaquantum Excel Add-In across all Exaquantum servers.

The Exaquantum administrator controls read and write access to Windows defined user groups. Read-only access allows process data to be viewed on displays by users. Write access allows users to write data to Exaquantum on a function block or tag basis.

● Multiple Server Support

Multiple Exaquantum servers can seamlessly integrate their process data together to allow visualization on a single display screen or report. For example, a display screen may consist of a textual tag field showing data from one Exaquantum server and a trend showing data from another Exaquantum server.

A Primary and Standby Exaquantum server is designated to contain the Role Based View information accessed by the users.

If Exaquantum calculation tags require inputs from tags located on other Exaquantum servers then this functionality (cross server calculations) is available by purchasing the Exaquantum Open Interface (NTPP007).

All Exaquantum servers must contain the same software revision.

● User Interfaces

Exaquantum provides the following user interfaces.

Exaquantum/Explorer

For users who need to create standard, pre-configured, fixed or ad-hoc display screens, the following Exaquantum/Explorer design tools are available:


- Graphics configuration and runtime support, with components such as Trends, X-Y Plots, Tubular Trends, Data Entry Grid, Data Write Back, Alarms and Events viewing, Excel Viewer and Web Browser.
- Advanced features such as Report Times, Scripting, Navigation and Data Parameterization.
- Excel Add-In for reporting and analysis of Exaquantum data.

Exaquantum/Explorer can be installed on a CENTUM HIS.

Exaquantum/Web

For people using Microsoft Edge or Chrome Web technology deployed on either their PC or tablet and Apple Safari on tablet devices. In addition, users can select tags from a displayed graphic for displaying on a trend. Exaquantum/Web supports the following features.

- Plant graphics containing dynamic plant views created with the Exaquantum Web Graphics Editor, add in description of running ad-hoc trend from graphic or imported and converted Yokogawa DCS graphics.
- Simple to use Trending, with a maximum of 4 graphs per page, featuring:
 - Time range selection
 - Zoom and Trend Legend
- Users can create ad-hoc Trends which can be saved for subsequent re-use and shared with other users.
- Trends can display Alarms & Events for process data analysis.
- Users can add annotations (notes) to Trends to document plant data.
- Display pre-configured Word, Excel, PDF, etc. reports.
- Excel Add-In for reporting and analysis of Exaquantum data in the Web environment that is compatible with the Exaquantum/Explorer Excel Add-In.
- X-Y plots for data analysis.
- Trends and X-Y plots can be displayed via a URL.

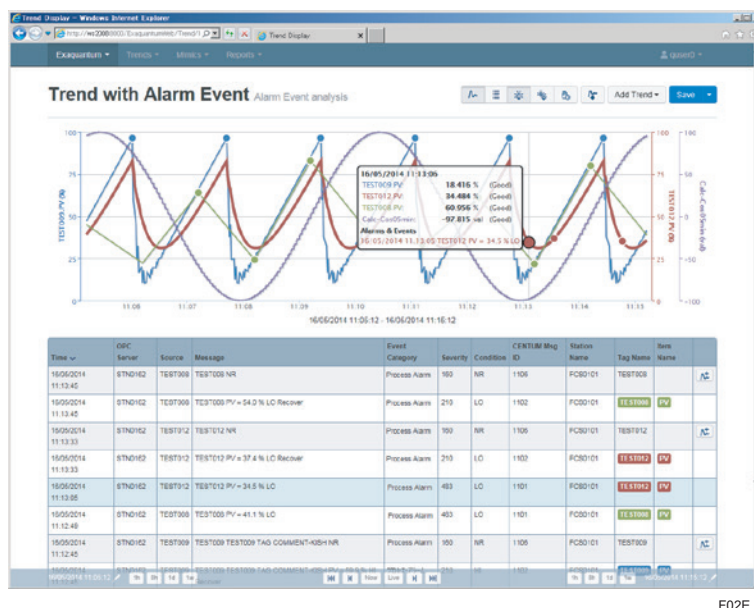

F02E.ai

Figure: Overlapped Trend with Alarms & Events

Exaquantum Graphic Conversion Tool

This tool converts imported CENTUM graphics into Exaquantum/Explorer and Exaquantum/Web graphics.

● Data Access

Exaquantum provides the following options.

Data Availability via OLE DB

Exaquantum raw, aggregated and calculated values, along with A&E, can provide valuable information to third party application packages. The Exaquantum OLE DB interfaces can be used to access this information.

These two interfaces allow users to view a snapshot of Exaquantum data using minimal programming.

Data Access via OPC Classic

Application packages can access Exaquantum data via the Exaquantum OPC Classic server, which supports OPC DA 2.05a and HDA 1.1.

Data Access via OPC UA

Exaquantum exposes HDA and DA to Yokogawa and third-party OPC UA Clients or other Exaquantum Servers to support multi-level Exaquantum systems.

PI OPC Open Interface

Exaquantum process data and Alarms & Events can be provided to an OSIsoft PI historian using the Exaquantum OPC Server interface. Tag definition data can be exported from Exaquantum, using Excel or text files to configure the PI historian. PI must have an equal number of tags to map the Exaquantum data.

Note: The number of tags required for PI is the total of Exaquantum's instantaneous values and all the aggregation items.

Note: If the PI OPC Open Interface is required, please contact your local Yokogawa representative in advance of implementation as some configuration is required.

● History Data Export (HDE) Tool (R3.20 or later)

HDE extracts tag data from the Exaquantum Historian and write to CSV file(s).

● Power BI support (R3.60 or later)

Import Exaquantum data (Tag and Alarm and Events) into Power BI for data analysis.

■ BUSINESS BENEFITS

The business benefits of making information available are both diverse, and industry-specific. Some of the typical benefits are described below.

● Information Distribution

The availability of large amounts of data available on the desktops and tablets of many users increases efficiency. This increase is a result of fast and easy access to many different types of data. RBNS further increases efficiency, by presenting users with just the data that is pertinent to them. When Internet and Intranet access to data is also taken into account, the benefits are even more apparent.

● Enhancing PCS Data

Many data sources have limited scope for enhancing their own data. Exaquantum can enhance PCS data with a set of built-in aggregations. For example, users in some hydrocarbon industries will find one hour (or shift, daily, etc.) values (minimum, maximum, mean, summations, equipment run time, etc.) more useful than raw data, especially if totalizers or accumulators are used for flow measurements. Exaquantum can further enhance the raw and aggregated data with custom calculations.

● Enhancing Data from Multiple PCSs

Exaquantum is able to refine the data from disparate data sources into high-value business information, often known as Key Performance Indicators (KPIs). For example, tonnage of a product can be calculated from a flow measured by a PCS and a density measurement provided by a Laboratory Management Information System (LIMS).

● Time Resolved Alarm and Event History

Exaquantum can read, historize and display Alarms & Events received from compliant OPC A&E interfaces, which can be presented in time order for analysis.

For industries where unplanned shutdowns follow a complex series of consequential events, this facility can be very valuable in identifying the original cause of the shutdown.

● An Integrated Platform

The Exaquantum philosophy of open access to data and information enables easy configuration and integration of application software.

Typical data flows between applications are the passing of:

- Sample results transferred from LIMS to Exaquantum can be used for displays, reports and the calculation of KPIs.
- Inventory and QA data from Exaquantum to an ERP system to optimize planning and scheduling campaigns.
- Condition monitoring data from Exaquantum to maintenance software to automatically initiate repairs and optimize Planned Maintenance Management schedules.

● Long Term History

Long-term historization of plant data by Exaquantum creates the opportunity for further analysis to take place.

Example 1: A system can be set to automatic or manual mode. Analysis of plant history can prove the success of the control settings and monitor their ongoing usage.

Example 2: A LIMS value may indicate a trend leading towards an out-of-spec product. Operators and engineers have the opportunity to implement a correction before waste products are created.

Example 3: The flow meter on a main product stream may be inaccurate by several percent indicating leaks or measurement errors. The measurements from other flow meters on connected streams can be used to identify an alternative, accurate measurement for the main product stream.

● Event Triggered Batch Processing

Batch applications can be notified automatically if any steps or changes occur in the process. These changes may originate from direct process measurements however they can also be the result of Exaquantum aggregations or calculations. Exaquantum is the standard route for any application that requires event notification from any PCS, thus minimizing development costs.

● IT Security

Legacy and Standard security levels are available allowing compliance with system security requirements.

● Microsoft SQL Server 2022 Standard (R3.50 or later)

Exaquantum installation includes Microsoft SQL Server as an Integrated Value Added Solution.

● Exaopc Product Security Support (R2.70 or later)

Exaquantum has adopted the same security function as Exaopc R3.70 (*1) which tightens the security for accessing process control systems (such as CENTUM).

*1: Exaopc (R3.70 or later) can set limits on data access for each user account connecting to Exaopc.

■ SYSTEM SPECIFICATION

Item	Specification (*1)
Maximum number of tags	Maximum 500,000 tags (*2)
Throughput of Exaquantum (Maximum data acquisition)	600,000 tags/minute (*3)
Data item gathering interval (minimum)	1 second (*4)
Data item data historization interval (minimum)	1 second (*4)
Number of concurrent users (Exaquantum/Explorer)	Up to 64/server
Number of concurrent users (Exaquantum/Web)	Up to 100 for 1 Exaquantum Web Server
Number of connected physical OPC servers per Exaquantum server	Maximum of 35 OPC DA and HDA servers (*5) per Exaquantum Server (Maximum of 31 OPC A&E and UAA&C servers per Exaquantum Server (*6) (*7))

*1: A suitable hardware platform and infrastructure (network) must be chosen to support the required sizing.

*2: Deployed across single or Multi-servers up to a maximum of 500,000 tags.
In case of Multi servers, for a maximum of five (5) Exaquantum servers.

*3: Select an appropriate number of RAID-1 or RAID-5 disks depending on the update rate as illustrated in the examples contained in the 'Hardware Disk Drive Configuration' section below.

*4: Depends on the OPC server performance.

*5: Number of connected OPC DA/HDA is included in OPC UA DA/HDA Server.

*6: The maximum number of supported A&E and UAA&C OPC servers is 31.

The combined total from all connected physical OPC server(s) is not to exceed 130 messages per second.

*7: When using process data from tags from other Exaquantum servers in calculations, then the Exaquantum servers are included in the number of connected OPC gateways.

■ OPERATING ENVIRONMENT

● Hardware Operating Environment

The minimum requirements for the hardware and software operating environments are described in the tables below. Please contact the Yokogawa representative for large or non-standard systems requirements.

Exaquantum Server (real-time and historical database)

CPU: Intel x64 architecture as shown below

No. of tags	Required CPU Specifications
Less than 20,000 tags	Xeon dual core 2 GHz or higher
20,000 - 50,000 tags	Xeon dual core 3 GHz or higher
50,000 - 100,000 tags	Xeon 4 core 3 GHz or higher
100,000 - 500,000 tags	Xeon 8 core 3 GHz or higher with Hyper-Threading enabled

Note: Please consider the number of Alarm and Event when required CPU Specification is considered. For reference, an Alarm and Event only server collecting data at the maximum rate (130 messages per second across all OPC servers) has a similar SQL load to the 20,000 tags load. For details, please contact your Yokogawa representative.

Main memory capacity

No. of tags	Operating System	Main Memory capacity	Main Memory Capacity for best performance (Level 7) (*2)
Less than 20,000 tags	Windows Server 2016 Standard 64-bit	8 GB or more	24 GB or more
	Windows Server 2019 Standard 64-bit (*1)		
	Windows Server 2022 Standard 64-bit (*1)		
	Windows Server 2022 Datacenter 64-bit		
20,000 tags - 100,000 tags	Windows Server 2016 Standard 64-bit	10 GB or more	32 GB or more
	Windows Server 2019 Standard 64-bit (*1)		
	Windows Server 2022 Standard 64-bit (*1)		
	Windows Server 2022 Datacenter 64-bit		
100,000 tags - 300,000 tags	Windows Server 2016 Standard 64-bit	32 GB or more	96 GB or more
	Windows Server 2019 Standard 64-bit (*1)		
	Windows Server 2022 Standard 64-bit (*1)		
	Windows Server 2022 Datacenter 64-bit		
300,000 tags - 500,000 tags	Windows Server 2016 Standard 64-bit	64 GB or more	192 GB or more
	Windows Server 2019 Standard 64-bit (*1)		
	Windows Server 2022 Standard 64-bit (*1)		
	Windows Server 2022 Datacenter 64-bit		

Note: Please combine the required capacity when another software is to be installed on the Exaquantum. Alarm and Event collection has minimal additional impact on memory requirements.

*1: IoT is included.

*2: Release R3.60 can enhance Exaquantum performance by allocating additional memory to data caching, enabling more efficient data read and write from and to disk.
The amount of memory allocated to the cache is configurable in 8 levels, with level 0 providing the equivalent performance of R3.50 and level 7 being optimal to maximize the performance of Exaquantum R3.60.

Disk capacity: Depends on the process data scan rate and retention period.

The disk free space required for installation is:

- System drive: minimum 8 GB (*1)
- SQL server installed drive: minimum 8 GB (*2)

*1: 16 GB or more empty space in main memory is required when a SQL server is installed on a system drive.

*2: 1 TB or more empty space in disk is required when OPC CAMS for HIS or UACS A&E messages are collected and saved.

Hardware disk drive details

Throughput	Details
Less than 2,000 data/second (*1)	Refer to "Example 1: Less than 2,000 updates/second"
2,000 - 5,000 data/second	Refer to "Example 2: 2,000 updates/second to 5,000 updates/second"
5,000 - 10,000 data/second	Refer to "Example 3: 5,000 updates/second to 10,000 updates/second"

Note: For the collection of Alarm and Event messages on the same server, consideration should be given to increase the throughput; if few (less than 500) tags exist and there is a high rate of Alarms and Events (130 per second) this can be treated as the equivalent of the 2,000 – 5,000 data/second throughput case on the assumption that there will be significant access to the Alarm and Event records from other applications.

*1: Yokogawa's Global PC can be used.

Hardware Disk Drive Configuration

In order to improve disk fault tolerance, configure all disks as RAID-1 or RAID-5 with cache provided.

Due to the high performance disk requirements of Exaquantum, SAS interfaces are recommended for all Exaquantum disks.

Note: In case of the throughput exceeds 5,000 notifications / second, it is recommended that SQL Server is installed on the following separate physical drives (or volume sets) from the disk drive for the operating system:

- 1 disk drive for the data files
- 1 disk drive for the log files

The following provides example disk specifications to meet the required OPC DA update rate.

Example 1: Less than 2,000 updates/second

Configure one RAID array for installation of all items.

Array No.	Minimum Write Speed	Hardware Speed	Hardware Interface	RAID Array Recommendation	Installation item
1	100 Mbyte/sec	10,000 rpm	6 G b/s SAS	RAID-5 (3 or more disks)	Operating System
					Applications (including Exaquantum Software)
					SQL Program files
					SQL Data files
					SQL Log files
					Online/Offline Archives

Example 2: 2,000 updates/second to 5,000 updates/second

Configure three RAID arrays for installation of all items.

Array No.	Minimum Write Speed	Hardware Speed	Hardware Interface	RAID Array Recommendation	Installation item
1	100 Mbyte/sec	15,000 rpm	6 G b/s SAS	RAID-5 (3 or more disks)	Operating System
					Applications (including Exaquantum Software)
					SQL Program files
2	200 Mbyte/sec	15,000 rpm	6 G b/s SAS	RAID-5 (4 or more disks)	SQL Data files
					SQL Log files
3	200 Mbyte/sec	15,000 rpm	6 G b/s SAS	RAID-5 (4 or more disks)	Online/Offline Archives

Example 3: 5,000 updates/second to 10,000 updates/second

Configure four RAID arrays for installation of all items.

Array No.	Minimum Write Speed	Hardware Speed	Hardware Interface	RAID Array Recommendation	Installation item
1	100 Mbyte/sec	15,000 rpm	6 G b/s SAS	RAID-5 (3 or more disks)	Operating System
					Applications (including Exaquantum Software)
					SQL Program files
2	300 Mbyte/sec	15,000 rpm	6 G b/s SAS	RAID-5 (6 or more disks)	SQL Data files
3	300 Mbyte/sec	15,000 rpm	6 G b/s SAS	RAID-5 (6 or more disks)	SQL Log files
4	300 Mbyte/sec	15,000 rpm	6 G b/s SAS	RAID-5 (6 or more disks)	Online/Offline Archives

Web Server

CPU: Intel x64 architecture Xeon dual core 2 GHz or higher

Main memory capacity

Operating System	Main Memory capacity
Windows Server 2016 Standard 64-bit	8 GB or more
Windows Server 2019 Standard 64-bit (*1)	
Windows Server 2022 Standard 64-bit (*1)	
Windows Server 2022 Datacenter 64-bit	

Disk capacity: 2 GB or more

Note: The above hardware environment is suitable when the Exaquantum server and Web server are installed on different servers. Please combine the required capacity if the Web server is to be installed on the Exaquantum server.

*1 : IoT is included.

Exaquantum User PCs

CPU	Equivalent to Intel Core i3 dual core 1.33 GHz or higher
Main RAM Memory Capacity	4 GB or more
Disk capacity	2 GB or more, 3 GB or more (in case of using MS Excel)
Resolution	1024 × 768 or better
Display colors	65,536 or more

Note: When an Exaquantum client is installed on a HIS, please follow the operational environment specified by the standard operation and monitoring function (LHS1100, LHM1101, VP6H1100).

Note: Please combine the required capacity when another software is to be installed on Exaquantum.

Note: To run Exaquantum Client on Windows 11 requires hardware that supports TPM 2.0, UEFI and secure boot.

Tablet PCs

	Apple - iPad	Windows - Tablets
Retina resolution	2048 × 1536	2160 × 1440
Non-Retina resolution	1024 × 768	1920 × 1080, 1366 × 768 or 1024 × 768
Size	7 inches or more	7 inches or more

Note: As for the Tablet PC, touch panel behavior only is confirmed.


PI OPC Interface PC

CPU	Equivalent to Core i3 dual core 2.50 GHz or higher
Main memory	2 GB or more
Disk capacity	Requires following free space for installation.
System drive	Minimum 2 GB required (40 GB recommended)

● Cloud Support (R3.60 or later)


Cloud supports in Azure IaaS or AWS (Amazon Web Service) host system configuration

Note: Bundled SQL licenses in Exaquantum is not permitted to bring your own licenses AWS or Azure environment, another SQL licenses is required.

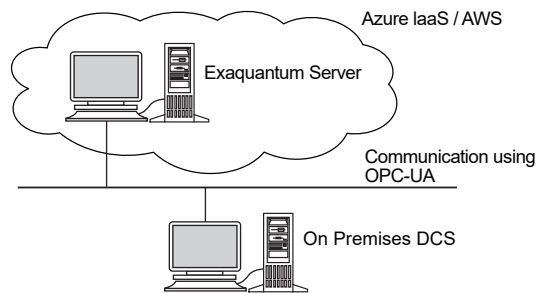

F04E.ai

figure On premises DCS and Exaquantum on cloud

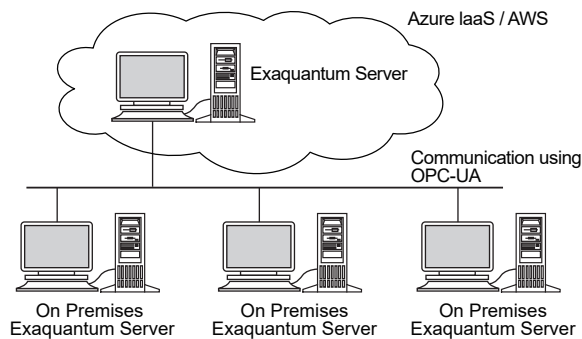

F05E.ai

figure On premises Exaquantum and Exaquantum on cloud

● Software Operating Environment

The packages contained in the Software Specification may support either '64-bit' or '32-bit' versions. If either '64-bit' or '32-bit' is not listed then only the 32-bit version is supported.

Hardware	Software Specification
Exaquantum Server	<p><Operating System></p> <ul style="list-style-type: none"> • Windows Server 2022 Datacenter 64-bit (*1) (*7) • Windows Server 2022 Standard 64-bit (*1) • Windows Server 2019 Standard 64-bit (*1) • Windows Server IoT 2022 (*1) • Windows Server IoT 2019 (*1) • Windows Server 2016 Standard 64-bit (*1) <p><Other Software></p> <ul style="list-style-type: none"> • Microsoft SQL Server 2022 Standard 64-bit (*2) • Microsoft Excel or Office 2016 (32-bit) / 2019 (32-bit / 64-bit) / 2021 (32-bit / 64-bit) / 2024 (32-bit/64-bit) / Microsoft 365 (32-bit / 64-bit) (*3) (*4) • Microsoft Edge (64-bit) (*6) • Chrome (64-bit) • Adobe Reader DC (*5)
Exaquantum Web Server	<p>< Operating System ></p> <ul style="list-style-type: none"> • Windows Server 2022 Datacenter 64-bit (*1) (*7) • Windows Server 2022 Standard 64-bit (*1) • Windows Server 2019 Standard 64-bit (*1) • Windows Server 2016 Standard 64-bit (*1) • Windows Server IoT 2022 (*1) • Windows Server IoT 2019 (*1) <p>< Other Software ></p> <ul style="list-style-type: none"> • Microsoft Edge (64-bit) (*6) • Chrome (64-bit) • Internet Information Services (IIS) • Adobe Reader DC (*5)

- *1: Exaquantum is a 32-bit application that can be installed with the WOW64 emulation environment provided with the 64-bit OS.
- *2: SQL Server (Main server modules are 64-bit) runtime version is bundled with Exaquantum.
Microsoft SQL Server can only be used by Exaquantum as stated in the SQL Server license certificate.
- *3: Supported Editions of Excel 2016 are listed below (Volume License Editions):
- Excel 2016
 - Office Standard 2016
 - Office Professional Plus 2016
- Supported Editions of Excel 2019 are listed below (Volume License Editions):
- Excel 2019
 - Office Standard 2019
 - Office Professional Plus 2019
- Supported Editions of Excel 2021 are listed below (Volume License Editions):
- Excel 2021
 - Office Standard 2021
 - Office Professional Plus 2021
- Supported Editions of Excel 365 are listed below (Click To Run Editions) (C2R):
- Excel 365
 - Microsoft Standard 365
- As for Microsoft 365 version, refer to the following Yokogawa Web site for the support status.
https://www.yokogawa.com/solutions/solutions/asset-operations-and-optimization/data-historian/plant-information-management-system/#Details_Support-info
- *4: There are sometimes compatibility issues, when opening Excel documents created on different OS or version of Excel. There is a workaround for these problems, described in Exaquantum/Explorer User's Manual Volume 3 - Excel Reports (IM36J04A12-03E).
- *5: Adobe Reader is required to browse Exaquantum R2.50 or later manuals.
- *6: When using Legacy Exaquantum/Web, it can only use Internet Explorer Compatibility Mode which must be enabled within the Microsoft Edge Browser.
- *7: Cloud support

Hardware	Software Specification
User PCs for Exaquantum/ Explorer (*9), Exaquantum/Web Client (*8)	<p><Operating System></p> <ul style="list-style-type: none"> • Windows Server 2022 Datacenter 64-bit (*1) (*9) • Windows Server 2022 Standard 64-bit (*1) • Windows Server 2019 Standard 64-bit (*1) • Windows Server 2016 Standard 64-bit (*1) • Windows Server IoT 2022 (*1) • Windows Server IoT 2019 (*1) • Windows 10 Enterprise 2016 LTSC 64-bit (*1) • Windows 10 Enterprise LTSC 2019 64-bit (*1) • Windows 10 Enterprise LTSC 2021 64-bit (*1) • Windows 10 IoT Enterprise 2016 LTSC 64-bit (*1) • Windows 10 IoT Enterprise LTSC 2019 64-bit (*1) • Windows 10 IoT Enterprise LTSC 2021 64-bit (*1) • Windows 10 Pro SAC 64-bit (*7) • Windows 11 Enterprise LTSC 64-bit • Windows 11 IoT Enterprise LTSC 64-bit • Windows 11 Enterprise 64-bit (*9) • Windows 11 Pro 64-bit (*9) • Windows 10 Enterprise SAC 64-bit (*7) • Microsoft Excel or Office 2016 (32-bit) / 2019 (32-bit/64-bit) / 2021 (32-bit/64-bit) / 2024 (32-bit/64-bit) / Microsoft 365 (32-bit/64-bit) (*2) • Microsoft Edge (64-bit) (*8) • Chrome (64-bit) • Adobe Reader DC (*3)
PI OPC Interface PC (*4)	<Operating System> (*4)
Tablet device on Web Client (Supported on R3.01 or later)	<p><Operating System></p> <ul style="list-style-type: none"> • iOS (From iOS 16 or later can be guaranteed) (*5) (*6) • Windows 10 Tablet (*5) (*6)

LTSC: Long Term Servicing Channel

SAC: Semi-Annual Channel

LTSB: Long Term Servicing Branch

- *1: Exaquantum is a 32-bit application that can be installed with the WOW64 emulation environment provided with the 64-bit OS.
- *2: Supported Editions of Excel 2016 are listed below (Volume License Editions):
- Excel 2016
 - Office Standard 2016
 - Office Professional Plus 2016
- Supported Editions of Excel 2019 are listed below (Volume License Editions):
- Excel 2019
 - Office Standard 2019
 - Office Professional Plus 2019

Supported Editions of Excel 2021 are listed below (Volume License Editions) :

- Excel 2021
- Office Standard 2021
- Office Professional Plus 2021

Supported Editions of Excel 365 are listed below (Click To Run Editions): (C2R)

- Excel 365
- Microsoft Standard 365

As for Microsoft 365 version, refer to the following Yokogawa Web site for the support status.

https://www.yokogawa.com/solutions/solutions/asset-operations-and-optimization/data-historian/plant-information-management-system/#Details_Support-info

- *3: Adobe Reader is required to browse Exaquantum R2.50 or later manuals.
- *4: When PI is used, please contact your Yokogawa representative.
- *5: Legacy Exaquantum/Web is not supported.
- *6: Exaquantum/Explorer and Excel Add-In are not supported.
- *7: The support policy in regard to operating system will depend on the policy of Microsoft.
If any problems occur in the OS during the additional servicing period of OS or after the end of support date, the service support might be charged by Microsoft and this will be out of scope for maintenance service for Exaquantum (SV3NTMP001).
Some functions of the Exaquantum/Explore and Exaquantum/Web client may possibly be restricted when Windows Update is applied to Windows 10 SAC. Refer to the following Yokogawa Web site for the support status.
https://www.yokogawa.com/solutions/solutions/asset-operations-and-optimization/data-historian/plant-information-management-system/#Details_Support-info
- *8: When using Legacy Exaquantum/Web, it can only use Internet Explorer Compatibility Mode which must be enabled within the Microsoft Edge Browser.
- *9: Cloud Support

● Virtualization platform (R3.15 or later)

Exaquantum can run on virtualization platform.

Please refer to the GS "IA System Products Virtualization Platform" (GS 30A05B10-01EN) about details.

● Co-existence or combination of Exaquantum and other solution-based software packages (SBP) (*1)

The definition of terms 'co-existence' and 'combination' is as follows:

Co-existence: Exaquantum and other SBP products reside on the same PC.

Combination: Exaquantum communicates with Exaopc or HIS OPC over a LAN network.

- *1: Other SBP products include Exaopc, Exapilot, Exaquantum/Batch, and Exaplog.

● Combination of Exaquantum and Exaopc OPC interface package via network

- Exaquantum can be connected with Exaopc OPC interface package R3.10 or later.
- Exaquantum can be connected with Exaopc OPC interface package (for HIS) R3.05 or later.

Note: For detailed information, refer to GS;

- GS 33K05F10-50E LHS2411 Exaopc OPC Interface Package (for HIS)
 - GS 33J05F10-01EN VP6H2411 Exaopc OPC Interface Package (for HIS)
 - GS 36J02A10-01E NTPF100 Exaopc OPC Interface Package
- However, either LHS2411 or VP6H2411 is used, History Catchup cannot be available.

Note: For detailed information, refer to GS 36J02A10-01E NTPF100 Exaopc OPC interface package. When Exaquantum is connected to Exaopc-RD, please contact your Yokogawa representative.

Note: The following Revision Numbers are required for Exaquantum to collect Alarms & Events from CAMS.

- Exaopc R3.72 or later
- CENTUM VP R5.03.20 or later

Note: The following Revision Numbers are required for Exaquantum to collect Alarms & Events from UACS

- Exaopc R3.78.10 or later
- CENTUM VP R6.07.10 or later

● Precaution of connecting with SMARTDAC+

When connecting to SMARTDAC+, ensure to meet the following requirement of SMARTDAC+;

- Firmware version R4.01.03 or later.
- When connecting to SMARTDAC+ by Exaquantum, ordering the SMARTDAC+ which come with E3 option is required. For more details, please refer to the GS of SMARTDAC+.

● Restrictions in Co-existence of Exaquantum and other SBP products

Exaquantum \ SBP products	Server	Client
Server (PIMS or Web servers)	Table 1	Table1
Client	Table 1	Table 2

Note: IT Security model must be set to the 'Legacy model' if Exaquantum and other SBP products are installed on a single PC.

Co-existence tables for Exaquantum with other SBP products are as shown below:

Table 1:

	Exaopc (R3.81) (*2)	Exapilot (R4.04)	Exaquantum /Batch	Exaplog (R3.40) (*3)	Platform for Advanced Control and Estimation (R5.05)
Exaquantum (R3.60)	OK (*1)	OK	N/A	OK	N/A

Table 2:

	Exaopc (R3.81)	Exapilot (R4.04)	Exaquantum /Batch	Exaplog (R3.40) (*3)	Platform for Advanced Control and Estimation (R5.05)
Exaquantum (R3.60)	OK	OK	N/A	OK	OK

OK: Applicable

N/A: Not Applicable

Note: Ensure other software operation environments such as OS are valid in addition to the variety of packages and their revisions.

*1: In the case where the PIMS server and Web server are combined, Exaopc can be also installed.

*2: Exaopc includes Exaopc-RD. Please contact Yokogawa when Exaopc resides with other revisions.

*3: As for another revision, please contact your Yokogawa representative.

● Restrictions in co-existence with HIS

		CENTUM VP HIS (R6.12)
Exaquantum (R3.60)	Server	N/A
	Client	OK (*1)

OK: Applicable

N/A: Not Applicable

Note: R3.20 IT security model for Exaquantum and other SBP products must be set to the same model when these packages are installed the same server.

Note: To ensure the variety of packages, their revisions and other operating environments such as the OS must be identical.

Note: When installing an Exaquantum client on CENTUM CS 3000 HIS, please contact your Yokogawa representative.

*1: On CENTUM VP R4.03 or later, Legacy model or Standard model (Standalone and Domain) can coexist.

■ MODELS AND SUFFIX CODES


● Exaquantum/PIMS

An Exaquantum license authorizes tags (data points) up to the number specified by each suffix code. Exaquantum supports a maximum number of 500,000 tags, deployed across single or multiple servers. Only one DVD set is provided regardless of the number of servers, unless otherwise requested. Every client PC connected to Exaquantum/PIMS must be licensed. One or more Exaquantum/Explorer Per-Seat Client licenses are provided with each tag license.

		Description
Model	NTPP001	Exaquantum Data Server Package
Suffix Codes	-S	Basic Software License
	1	New Order (with Media)
	1	English version
	-00A5	500 Tags / 1 client
	-0001	1,000 Tags / 2 clients
	-0002	2,000 Tags / 4 clients
	-0003	3,000 Tags / 4 clients
	-0005	5,000 Tags / 4 clients
	-0007	7,500 Tags / 4 clients
	-0010	10,000 Tags / 10 clients
	-0020	20,000 Tags / 10 clients
	-0040	40,000 Tags / 10 clients
	-0060	60,000 Tags / 10 clients
	-0080	80,000 Tags / 10 clients
	-0099	100,000 Tags / 10 clients
	-00B2	200,000 Tags / 10 clients
	-00B3	300,000 Tags / 10 clients (R3.01 or later)
	-00B4	400,000 Tags / 10 clients (R3.01 or later)
	-00B5	500,000 Tags / 10 clients (R3.01 or later)

● Exaquantum Package Configuration

Above package requires below package.

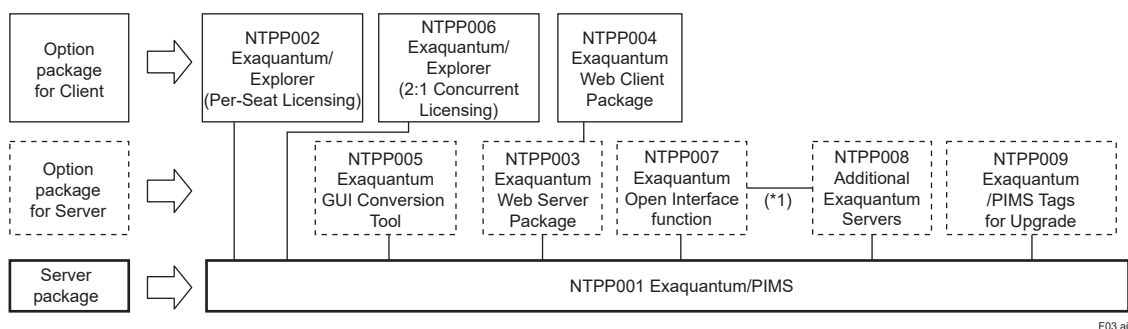

*1: If cross server calculation on multi-server environment is used, please order NTPP001, NTPP007 and NTPP008 at the same time.

● Exaquantum/Explorer (Per-Seat Licensing)

This is an optional package for adding additional per-seat users to the NTPP001 package. Each license will allow an Exaquantum/Explorer client to be installed on a single client PC.

		Description
Model	NTPP002	Exaquantum Client Per-Seat Licensing Interface Package
Suffix Codes	- S	Basic Software License
	1	Always 1
	1	English version
	-□□	Enter additional client licenses in □□ (01-99)

● Exaquantum/Web Server

This is an optional package for the NTPP001 package. The number of Web servers required should be based upon the number of concurrent users because more than one Web server may be required to prevent overloading. In the case of more than 100 Web clients, please use more than one Web Server with a sufficient server specification. Please contact your Yokogawa representative for assistance.

		Description
Model	NTPP003	Exaquantum Web Server Package
Suffix Codes	- S	Basic Software License
	1	Always 1
	1	English version
	-□□	Enter number of Web servers required in □□ (01-99)

● Exaquantum/Web Client (Per-Seat Licensing)

This is an optional package for adding web users, requiring both NTPP001 and NTPP003. Each Exaquantum/Web client PC or Tablet PC connected to Exaquantum must be licensed. Each license allows an Exaquantum/Web client to be installed on a single client PC. However, web users are not bound to any one PC and therefore user profiles are used to control access to Exaquantum.

		Description
Model	NTPP004	Exaquantum Web Client Package
Suffix Codes	- S	Basic Software License
	1	Always 1
	1	English version
	-□□	Enter number of per-seat Web client licenses required in □□ (01-99)

● Exaquantum GUI Conversion Tool

This is an optional package that requires the NTPP001 package. It provides conversion of graphics files suitable for display within Exaquantum/Explorer and Exaquantum/Web screens.

		Description
Model	NTPP005	Exaquantum GUI Conversion Tool
Suffix Codes	- S	Basic Software License
	1	Always 1
	1	English version
	E	CENTUM Graphics to Exaquantum/Explorer format
	W	CENTUM Graphics to Exaquantum/Web format

● Exaquantum/Explorer (2:1 Concurrent Licensing)

This is an optional package for adding new or additional concurrent users to the NTPP001 package.

Each concurrent license will allow an Exaquantum/Explorer client to be installed on two PCs however only one Exaquantum/Explorer client can be used at one time. For example, if NTPP006-S11-02 is purchased then Exaquantum/Explorer can be installed on four PCs where any two of the four PCs can be connected to Exaquantum at the same time.

All Exaquantum/Explorer client PCs must be licensed even if Microsoft Terminal Server is used.

		Description
Model	NTPP006	Exaquantum User 2:1 Concurrent Licensing Interface Package
Suffix Codes	- S	Basic Software License
	1	Always 1
	1	English version
	-□□	Enter new or additional concurrent client licenses in □□ (01-99)

● Exaquantum Open Interface

This is an optional package for the NTPP001 package to allow access to Exaquantum process data via OPC DA 2.05a and HDA 1.1, OPC UA DA and HDA. This package is also required for each Exaquantum server providing tag data to Exaquantum calculated tags located in another Exaquantum server.

		Description
Model	NTPP007	Exaquantum Open Interface function
Suffix Codes	- S	Basic Software License
	1	Always 1
	1	English version
	-□□	The number of OPC Classic clients (1-5)
	-UA	OPC UA Server (DA, HDA) (*1)
	-YY	Additional OPC UA clients (DA,HDA) (*2)
Option Codes	/YK□□	The number of Yokogawa products as OPC UA clients (1-20) (*3)
	/NY□□	The number of Non-Yokogawa products as OPC UA clients (1-20) (*3)

*1: When ordering OPC UA server newly, please specify -UA. At that time, according to OPC UA client, please specify the number of OPC UA client as /YK□□ or /NY□□ also.

*2: When adding OPC UA client to existing OPC UA server, please specify -YY. At that time, according to OPC UA client, please specify the number of OPC UA client as /YK□□ or /NY□□ also.

*3: Sum of number of /YK□□ and /NY□□ can be specified up to 20 (including existing UA client).

● Additional Exaquantum Server License

This is an optional package to license Exaquantum servers within an Exaquantum multi-server environment.

		Description
Model	NTPP008	Additional Exaquantum Servers
Suffix Codes	- S	Basic Software License
	1	Always 1
	1	English version
	-□□	Enter number of new or additional Exaquantum server Licenses in □□ (01-04)

Note : If Multi-Server is constructed, please Place Exaquantum Server (NTPP001) together at the same time.

● Exaquantum Additional Tags

This is an optional for adding additional Exaquantum tags to the NTPP001 package.

		Description
Model	NTPP009	Exaquantum/PIMS Tags for Upgrade
Suffix Codes	- S	Basic Software License
	2	For Upgrade of 500,000 or less Exaquantum tags
	1	English version
Option Codes (*1) (*2)	/S□□□	Enter number of additional Exaquantum tags (001-009) in groups of 1,000 until a maximum total of 10,000 tags are reached.(*3)
	/M□□□	Enter number of additional Exaquantum tags (001-010) in groups of 1,000 until a maximum total of 20,000 tags are reached. This can only be ordered when the previous tier has been reached.(*4)
	/L□□□	Enter number of additional Exaquantum tags (001-080) in groups of 1,000 until a maximum total of 100,000 tags are reached. This can only be ordered when the previous tier has been reached.(*5)
	/X□□□	Enter number of additional Exaquantum tags (001-099) in groups of 1,000 until a maximum total 500,000 tags are reached. This can only be ordered when the previous tier has been reached. (R3.01 or later) (*6)

*1: Addition to the number of tags purchased with the existing Exaquantum system plus the number of tags specified by the new Exaquantum Data Server package (NTPP001)

*2: (Example)
- Model name when adding 6,000 tags to Exaquantum with 5,000 tags.
"NTPP009-S21/S005/M001".

Case example	Number of tags before addition	Additional tags	Required model name
Addition to the number of tags purchased with the existing Exaquantum system	Number of tags :5,000 NTPP001-S11-0003 NTPP009-S21/002	6,000 tags	NTPP009-S21/S005/M001
Addition to the number of tags specified by the new Exaquantum Data Server package(NTPP001)	Number of tags :5,000 NTPP001-S11-0005	6,000 tags	NTPP009-S21/S005/M001

*3: (Example)
- Model name when adding 6,000 tags to Exaquantum with 5,000 tags (11,000 tags total).
"NTPP009-S21/S005/M001".

*4: (Example)
- Model name when adding 6,000 tags to Exaquantum with 5,000 tags (11,000 tags total).
"NTPP009-S21/S005/M001".
- Model name when adding 4,000 tags to Exaquantum with 18,000 tags (22,000 tags total).
"NTPP009-S21/M002/L002".

*5: (Example)
- Model name when adding 4,000 tags to Exaquantum with 18,000 tags (22,000 tags total).
"NTPP009-S21/M002/L002".
- Model name when adding 40,000 tags to Exaquantum with 80,000 tags (120,000 tags total).
"NTPP009-S21/L020/X020".

*6: (Example)
- Model name when adding 40,000 tags to Exaquantum with 80,000 tags (120,000 tags total).
"NTPP009-S21/L020/X020".
- Model name when adding 100,000 tags to Exaquantum with 200,000 tags (300,000 tags total).
"NTPP009-S21/X099" and "NTPP009-S21/X001".

■ ANNUAL MAINTENANCE CONTRACT

The product is supplied without the manufacturer's warranty costs. A warranty is obtained by purchasing an Annual Maintenance Contract (AMC), which covers a specified (contract) time period (usually 1 year). It is mandatory that an AMC(s) is purchased when a Solution Based Software license products is ordered. The AMC will start on the date that the license product is delivered to the Yokogawa Sales Office. You cannot order an optional software product, unless an active AMC for the existing Solution Based Software license has been purchased.

For more details of the maintenance service, please refer to the "Maintenance Services for Solution-Based Software Package" (GS 36J20A10-01E).

● Exaquantum Maintenance Service

		Description
Model	SV3NTMP001	Exaquantum Maintenance Service
Suffix Codes	- S	Annual Contract
	1	Always 1
	1	Always 1
	-A5	500 Tags / 1 client
	-01	1,000 Tags / 2 clients
	-02	2,000 Tags / 4 clients
	-03	3,000 Tags / 4 clients
	-05	5,000 Tags / 4 clients
	-07	7,500 Tags / 4 clients
	-10	10,000 Tags / 10 clients
	-20	20,000 Tags / 10 clients
	-40	40,000 Tags / 10 clients
	-60	60,000 Tags / 10 clients
	-80	80,000 Tags / 10 clients
	-99	100,000 Tags / 10 clients
	-B2	200,000 Tags / 10 clients
	-B3	300,000 Tags / 10 clients (R3.01 or later)
	-B4	400,000 Tags / 10 clients (R3.01 or later)
	-B5	500,000 Tags / 10 clients (R3.01 or later)
	-YY	When ordering using the Option Code (below)
	-N	New
	-R	Renewal

		Description
Model	SV3NTMP001	Exaquantum Maintenance Service
Option Codes	/S□□	Enter number of additional Exaquantum tags in groups of 1,000 until a maximum total of 10,000 tags are reached (01 - 09).
	/M□□	Enter number of additional Exaquantum tags in groups of 1,000 until a maximum total of 20,000 tags are reached. This can only be ordered when the previous tier has been reached. (01 - 10).
	/L□□	Enter number of additional Exaquantum tags in groups of 1,000 until a maximum total of 100,000 tags are reached. This can only be ordered when the previous tier has been reached (01 - 80).
	/X□□	Enter number of additional Exaquantum tags in groups of 1,000 until a maximum total of 500,000 tags are reached. This can only be ordered when the previous tier has been reached (01 - 99).
	/UI□□	Enter number of Exaquantum/Explorer Licenses in □□ (01 - 99).
	/UC□□	Enter number of Exaquantum/Explorer 2:1 Concurrent Licenses in □□ (01 - 99).
	/WS□□	Enter number of Exaquantum Web server in □□ (01 - 99).
	/WC□□	Enter the number of Exaquantum Web Client Licenses in □□ (01 - 99).
	/GE	Exaquantum GUI Conversion Tool (Exaquantum/Explorer format).
	/GW	Exaquantum GUI Conversion Tool (Exaquantum/Web format).
	/OP□□	The number of OPC Classic clients (1-5).
	/ML□□	Enter number of Exaquantum multi-server Licenses in □□ (01-04).
	/YK□□	The number of Yokogawa products as OPC UA clients (1-20) (*1)
	/NY□□	The number of Non-Yokogawa products as OPC UA clients (1-20) (*1)

*1: Sum of number of /YK□□ and /NY□□ can be specified up to 20 (including existing UA client).

■ TRADEMARK ACKNOWLEDGMENT

The names of corporations, organizations, products and logos herein are either registered trademarks or trademarks of Yokogawa Electric Corporation and their respective holders.